



**2014-2016 Fiesta ST
5-Pack Diffuser Fins
Installation Guide
(U.S, U.K and Australia Spec Bumpers)**



5-Pack Diffuser Fin Installation


Do not install with the adhesive until you have read through this entire installation guide and understand the placement of the fins and the **“SWEET SPOT” of each fin.**

Clean the bottom of the bumper first, with the supplied alcohol wipes.



5-Pack Diffuser Fin Installation

The two outer fins are identical and interchangeable (EXCEPT FOR U.K and AUSTRALIA spec rear bumpers), the center fin is the only one that is narrower, see below:

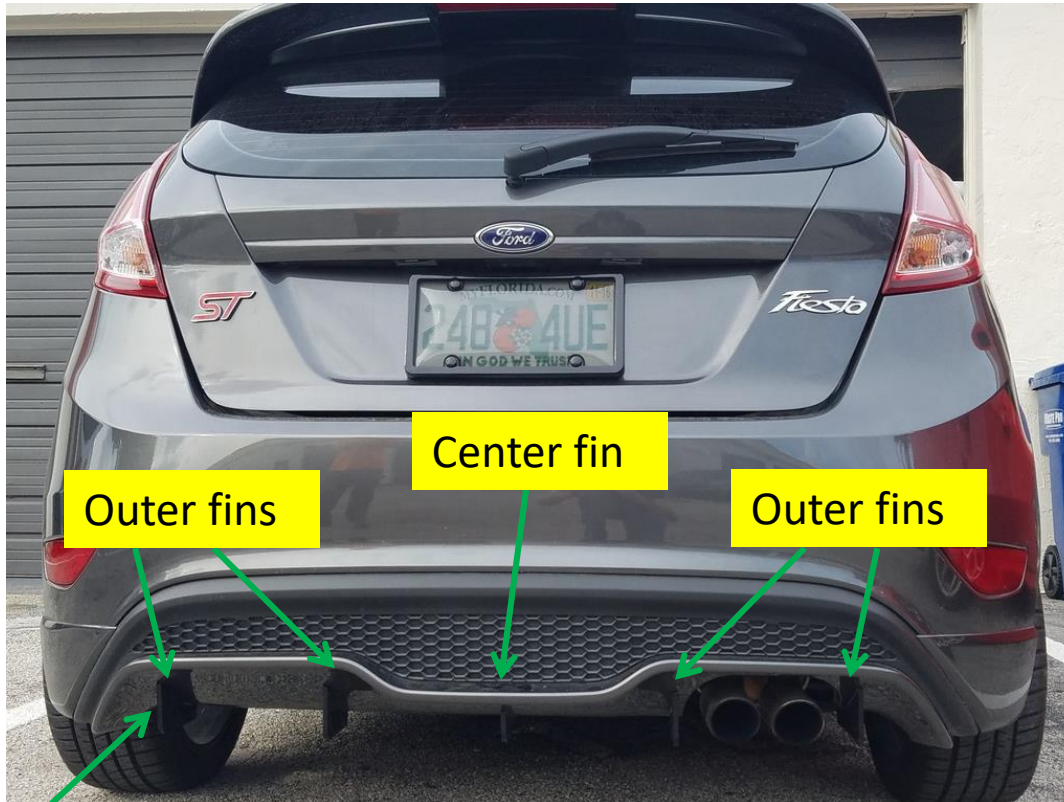

U.K or Australia spec fin goes here



5-Pack Diffuser Fin Installation

Placement of the fins can begin with the center fin. Do not remove the tape protector yet!! Place the fin in the center of the bumper, it is best to have a friend stand far behind you to eyeball your work and ensure you aren't tilting the fin or twisting it.




Once you are confident in the placement of the center fin, you can use an erasable marker or piece of painters tape to mark the spot. Remove the adhesive protector from the fin and firmly press the fin onto the bumper, have your friend or marking mechanism ensure it is straight.



5-Pack Diffuser Fin Installation

Use the below image as a guide. This arrangement is the most convenient for aesthetics and clearing the tailpipe as well as clearing other tabs that are present underneath the ford bumper.

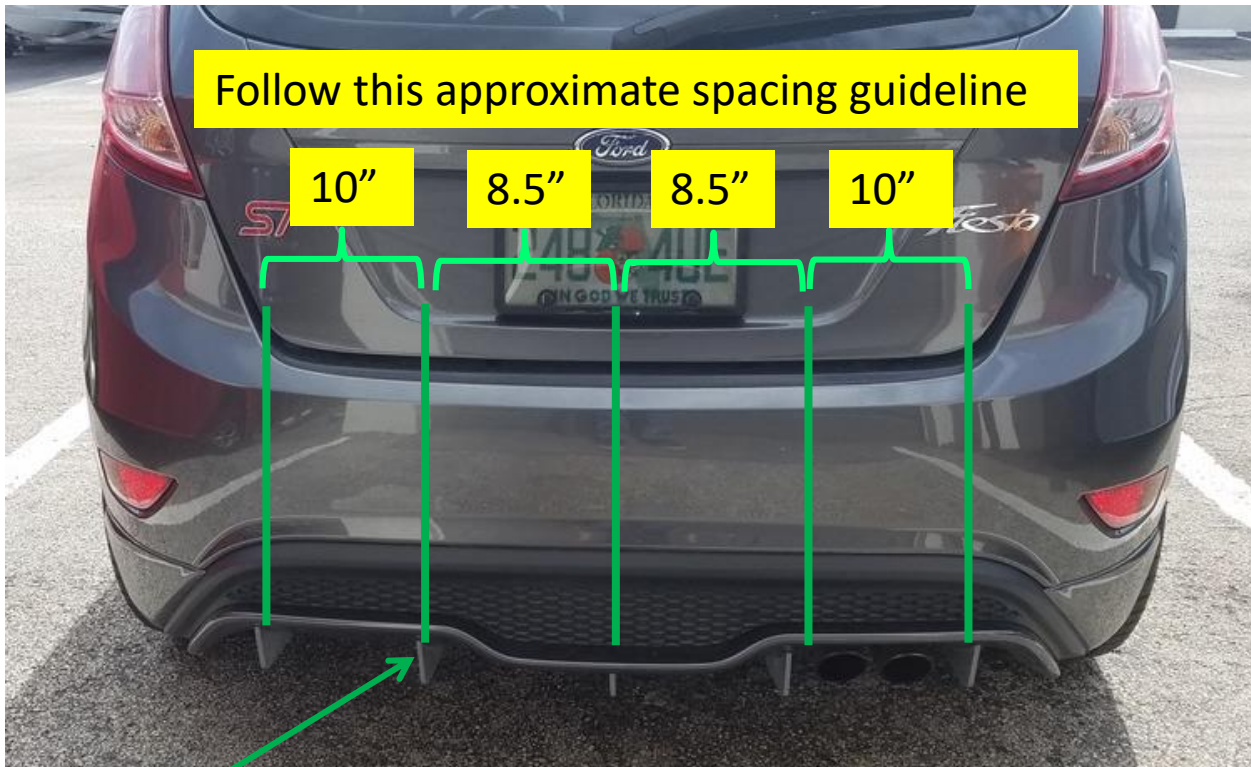


This fin goes on the DRIVERS side of the bumper tab that is present underneath the bumper, you'll see it by looking under the bumper.



5-Pack Diffuser Fin Installation

Supplied with your kit are 4 x L-brackets with pre-applied 3M adhesive. These brackets are to be added on each side of the **outer 4 fins only**, see below for which side to apply the bracket.

Make sure the brackets are as far forward as possible so they are out of sight.

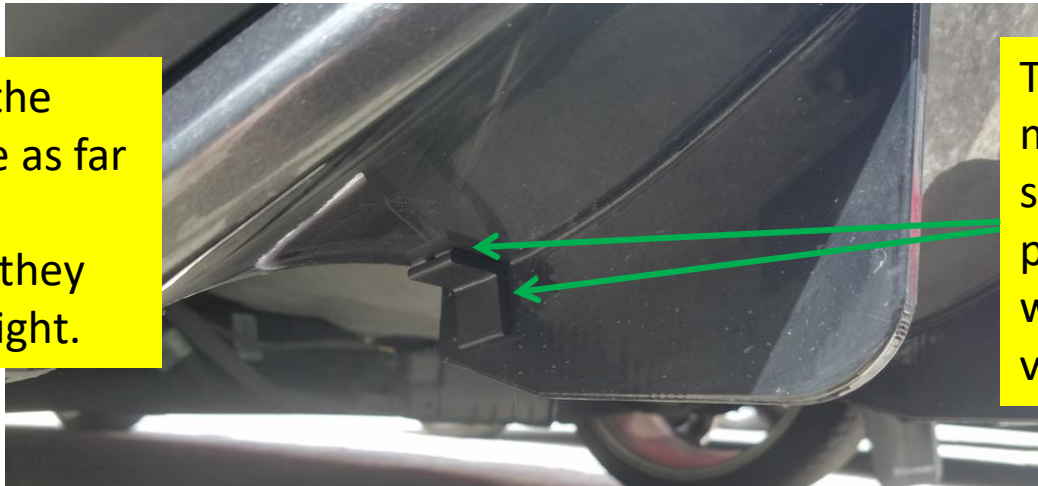

Try to ensure the bracket makes first contact in a square fashion with both perpendicular surfaces, this will ensure the fin remains vertical!

REMEMBER TO CLEAN THE SURFACES WITH ALCOHOL WIPES PRIOR TO APPLICATION OF THE BRACKETS

